

Operation, Installation and Maintenance Manual

DK-SF15/T-PG MED


Horn speaker for marine application, 15W power, certified MED/1.44b



Technical Data

Colour	RAL 7035
Dimensions	209x321 mm
Dispersion -6dB, 500Hz	360° h/v
Dispersion -6dB, 1KHz	110° h/v
Dispersion -6dB, 2KHz	70° h/v
Dispersion -6dB, 4KHz	40° h/v
Frequency Range	677 - 5.400 Hz
Frequency Response	300 - 13.800 Hz
Power	15/7,5/3,75/1,9 (20) W

Environmental Category: Category Unknown

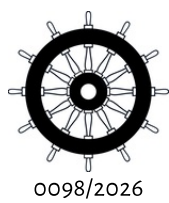

(EU) 2025/1533, item No. MED/1.44b. SOLAS 1974 as amended, Regulation II-2/12,21,22, III/4, 6 & X/3, LSA Code VII, HSC Code 4,8, IMO MSC.1/Circ. 808, 1369/Add.1
suitable for:

- Cargo ships
- Passenger ships without SRtP
- Passenger ships with SRtP

Compass Safe Distance: min. 5 m
to prevent magnetic interference with navigational instruments

TO MAKE PEOPLE LISTEN



DK-SF15/T-PG MED

Mounting Instruction

- 1. Mount the U-bracket on the ceiling with the appropriate screws for the surface.
- 2. If necessary, remove the speaker enclosure from the U-bracket.
- 3. Insert the loudspeaker cable through the cable entry of the previously removed rear wall of the housing.
- 4. Connect the loudspeaker cable to the terminals 100V and COM.
If necessary, select a different power tapping.
- 5. Carefully reinsert the back panel into the housing.

EQ Settings

EQ Setting Frequency [Hz]	Relative level to 1000 Hz [dB]	EQ Setting Frequency [Hz]	Relative level to 1000 Hz [dB]	EQ Setting Frequency [Hz]	Relative level to 1000 Hz [dB]	EQ Setting Frequency [Hz]	Relative level to 1000 Hz [dB]
20	0	80	0	315	+12	1250	0
25	0	100	-12	400	+12	1600	-4
31,5	0	125	-12	500	+8	2000	0
40	0	160	-8	630	+4	2500	0
50	0	200	0	800	-2	3150	0
63	0	250	+6	1000	0	4000	+8
80	0	315	+12	1250	0	5000	+12
100	-12	400	+12	1600	-4	6300	+12

To ensure uninterrupted operation of the public address and voice evacuation system during a fault condition, this loudspeaker is equipped with integrated short-circuit protection:

A Ceramic Terminal Block ensures high-temperature resistance and electrical isolation of the input connection.

A Thermal Fuse automatically disconnects the loudspeaker driver in the event of excessive heat (e.g., due to fire or driver failure), preventing a short circuit across the 100V line.

Do not bypass or remove the thermal fuse under any circumstances.

Ensure correct polarity when connecting to the ceramic terminal block. Verify the integrity of protection components during periodic maintenance.



CE-Symbol according to 93/68EWG
Measurements according to DIN IEC 268-5
RoHS compliant (2011/65/EU)

ic audio GmbH, Boehringerstraße 14A
68307 Mannheim, Germany

MED certification
Notified
Body No.: 0098
Certificate No.:
MEDB0000AMS