

Operation, Installation and Maintenance Manual

DL-P10-165/T SWF MED


Ceiling speaker for marine application, 10W power, certified MED/1.44b



Technical Data

Colour	RAL 9016
Dimensions	220x82 mm
Ceiling Cut-out	175 mm
Dispersion -6dB, 500Hz	165° h/v
Dispersion -6dB, 1KHz	165° h/v
Dispersion -6dB, 2KHz	145° h/v
Dispersion -6dB, 4KHz	65° h/v
Frequency Range	50 - 24.000 Hz
Frequency Response	42 - 25.000 Hz
Power	10/6/3/1,5 W

Environmental Category: Category A (IEC 60945 - Protected Equipment)

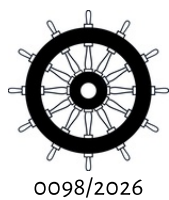

(EU) 2025/1533, item No. MED/1.44b. SOLAS 1974 as amended, Regulation II-2/12,21,22, III/4, 6 & X/3, LSA Code VII, HSC Code 4,8, IMO MSC.1/Circ. 808, 1369/Add.1
suitable for:

- Cargo ships
- Passenger ships without SRtP
- Passenger ships with SRtP

Compass Safe Distance: 2.70 m (standard compass), 1.75 m (steering and emergency compass)
to prevent magnetic interference with navigational instruments


TO MAKE PEOPLE LISTEN



DL-P10-165/T SWF MED

Mounting Instruction

1. Create the necessary ceiling cut-out and check the installation depth.
2. Insert the loudspeaker cable through the cable entry of the previously opened connector housing.
3. Connect the loudspeaker cable to the terminals 100V and COM.
If necessary, select a different power tapping.
4. Close the housing again.
5. Tension the springs upwards and insert the speaker into the ceiling cut-out with the springs first.
6. Carefully relieve the tension on the springs until the speaker is centred in the ceiling cut-out.

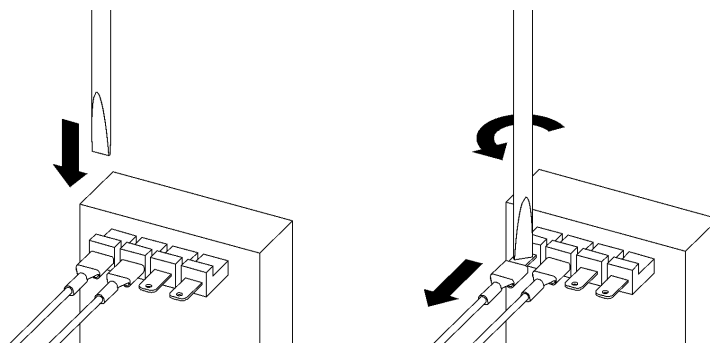

Power Tappings

Black	Red	Yellow	Blue	Green
COM	10	6	3	1,5



CE-Symbol according to 93/68EWG
Measurements according to DIN IEC 268-5
RoHS compliant (2011/65/EU)

ic audio GmbH, Boehringerstraße 14A
68307 Mannheim, Germany

MED certification
Notified
Body No.: 0098
Certificate No.:
MEDB0000AMS